

RED COPPER SQUARE.

Cook 8 Different Ways! The Only Pan You'll Ever Need!

Broil • Bake • Steam • Fry • Sauté • Braise • Deep Fry • Roast

- Smooth ceramic surface is anti-stick, anti-scratch
- Cook on all stovetop surfaces and in the oven up to 500 °F
- Dual riveted handles
- Features vented glass lid



WARNING

READ ALL WARNINGS AND SAFE USE INSTRUCTIONS CAREFULLY AND THOROUGHLY BEFORE USE. FAILURE TO FOLLOW THE WARNINGS PROVIDED BELOW MAY RESULT IN PERSONAL INJURY, PROPERTY DAMAGE, OR DAMAGE TO YOUR RED COPPER SQUARE

Care Instructions

- Do not use your cookware in the microwave or toaster oven as this might cause electric sparks or fire, or damage the microwave and your cookware.
- Monitor cookware during use to avoid potential injury to children or the risk of fire.
- Always carefully oversee children who are near cookware that is in use, or injury may result.
- DO NOT handle Red Copper Square pan inside the oven without using oven mitts because the pan and handles will be very hot.
- Use care when using the glass lid. As with any glassware for cooking, the lid could break due to sudden temperature changes or impact if it is dropped or knocked against a hard object.
- DO NOT directly expose the glass to a burner or other source of heat, do not use lid in oven.
- Allow lid to cool before washing.
- Avoid sudden temperature changes to lid.
- DO NOT put lid under faucet or in wet sink when it is hot.
- DO NOT allow damp fabric to contact the lid when the lid is hot.
- Preheat oven before placing cookware inside the oven.
- DO NOT apply sudden force to the glass lid, as it may shatter.
- Immediately stop using the lid if the lid cracks, chips, or becomes badly scratched.
- DO NOT remove dried food from the lid with sharp or metal utensils as the lid may be damaged.
- DO NOT attempt to repair lid if it is chipped or cracked.
- Be careful when handling broken glass because the pieces may be extremely small.
- Always use care when handling hot cookware to avoid potential injury. Lid and handles might become hot during prolonged cooking. Use oven mitts or pot holders with lifting the lid or the cookware.
- Never leave an empty Red Copper Square pan over a burner that is hot or turned on. This may damage your cookware or the stove.
- This product is for home use only. It is not intended for camping or commercial use.
- Do not use aerosol cooking sprays. These sprays will build up on cookware and become difficult to remove while reducing the nonstick coating.

Congratulations On Purchasing Red Copper Square

Now you have the newest cooking technology right in your own kitchen. Red Copper Square has an advanced copper ceramic coating that is healthier for you and your family because it's PFOA & PTFE free. With Red Copper Square you save energy, money and time. You will never need or want another pan again. Read all instructions before using Red Copper Square.

Contents:

- Red Copper Square
- Fry Basket
- Cookbook
- Glass Lid
- Steam & Roast Rack



First Time Use

Just as professional chefs do with the finest high quality cookware, Red Copper Square needs to be seasoned before you use it for the first time. Seasoning your Red Copper Square is simple.

1. Spread a light coating of vegetable oil over the entire inside surface of the pan.
2. Place pan in a oven that is preheated to 300 °F for 20 minutes.
3. Carefully remove the pan from the oven using oven mitts.
4. Let the pan cool down completely.
5. Wipe away excess oil with a cloth or paper towel.
6. You are now ready to start cooking!

To maintain the exceptional performance of the Red Copper Square, we recommend that you repeat this process at least twice a year*. We also recommend before first use that you hand wash the pan in hot water with a mild soap or dish detergent. Rinse thoroughly and dry with a soft dish towel.

* If the performance of the non-stick coating diminishes repeat the seasoning process.

During Cooking

- Red Copper's non-stick surface does not require the addition of oil or butter during cooking. For taste may want to add a small amount of oil/butter that has a high smoke point.
- Do not use extra virgin olive oil or aerosol cooking sprays. They cannot withstand high heating and will leave a thin carbonized layer on the non-stick surface of your pan.
- We recommend that you use this pan on low to medium heat for most cooking. The Red Copper non-stick coating distributes the heat more effectively and evenly.

Safe Cooking Utensils

- To prevent ruining the surface of this pan we recommend using non-metal utensils.
- Do not cut, slice, or chop anything inside the pan.
- The use of sharp or metal utensils can scratch the cooking surface, causing the pan not to perform correctly.

Simple Maintenance

- Always maintain your pan to cool down completely before cleaning. Never fully submerge a hot pan in cold water because this can cause irreversible damage.
- We recommend hand washing this product with warm soapy water. You can also put this pan in the dishwasher.
- Never use steel wool or metal cleaning pads on this product, it can scratch the surface.
- If burned or stuck-on food still remains after washing, you may need to soak the pan overnight to loosen the residue.

Red Copper Recommendations

Cooking Over A Gas Stove

- When cooking over a gas burner do not use excessive heat and make sure that the flame only touches the bottom of the pan. Too high of a flame that touches the sides of the pan can discolor the finish.

Getting Rid of Stains Caused by a Gas Burner

- If you notice some staining occurring on the bottom of the pan try using some oven cleaner on the OUTSIDE surfaces only. Make sure to follow the oven cleaners' manufacturers instructions.

Safe Storage

- We recommend you store your Red Copper Square by hanging it by the handle on either a peg board or a cookware rack. If you are going to store your pan in a cabinet, please be careful when stacking other pans inside each other. The sharp edges of other pans could scratch and ruin the finish.

Cooking Versatility

- With your Red Copper Square you can the prepare meals in 8 different ways! Not only can you use this pan on the stove top, you can cook meals in the oven. Oven temperature should not exceed 500 °F.

Red Copper™
LIFETIME REPLACEMENT GUARANTEE

Telebrands warrants that, for the original purchaser's entire lifetime, Red Copper Square won't have defects in material and workmanship if used only for regular household purposes. If the Red Copper Square is found defective during this time, we will replace or repair the Red Copper Square at our option.

There will be no charge, besides processing fee as follows:

Individual Piece \$14.99

To obtain the replacement or repair, send the product, your shipping address and phone number, the nature of the issue with your Red Copper Square to: Telebrands Corp. - Red Copper Warranty, 79 Two Bridges Road, Fairfield, NJ 07004.

You may direct any questions to 1-800-280-5424. When you ship your product to us, make sure you can track your shipment and obtain insurance, as we are not responsible for it and the Lifetime Warranty does not apply to items lost or damaged in transit.

For better service, you may register at <https://www.redcoppersquare.com/warranty>.

If you are a California resident, the shipping and handling charge is inapplicable, provided you supply proof of purchase and contact us at 1-800-280-5424 to obtain instructions. Under California law, if the warranty covers the Red Copper Square defect, California residents may alternately return the Red Copper Square to the merchant who sold it or to a retail store, which sells similar Red Copper Square products. The merchant then may offer a repair, refund the purchase price minus loss of value to the product from the consumer's use, or suggest to the consumer a repair facility independent from the merchant. If these do not provide appropriate relief, the California resident customer can then go to an independent repair facility if service is economically feasible. Telebrands will then pay for service, repair, replacement, or refund for Red Copper Square covered by the Lifetime Replacement Guarantee if the amount is reasonable.

This warranty does not cover or apply to damage to the Red Copper Square that is the result of misuse, abuse, accident, heating beyond temperatures specified in the Red Copper Square instructions, scratches or damage that is merely cosmetic or minor in that it does not significantly affect the performance of the Red Copper Square. In addition, the Lifetime Replacement Guarantee expressly excludes incidental and consequential damages of any kind whatsoever. As some states prohibit exclusion or limitation of incidental and consequential damages, this exclusion may not apply to you. While the Red Copper Square Lifetime Replacement Guarantee provides certain legal rights, other rights, which vary from state to state, may also apply.

LIMITATION OF LIABILITY

Liability limited to the purchase price of this product. Telebrands Corp. shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Manufactured for
TELEBRANDS
Fairfield, NJ 07004
©2016 Telebrands
www.telebrands.com
Made in China